




Instruction Manual


GENERAL DESCRIPTION OF PARTS

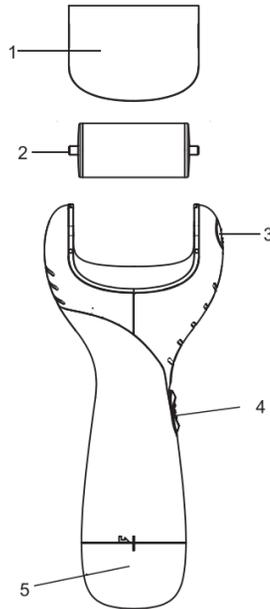

1. Protective cover
2. Roller
3. Release button for roller
4. On/Off switch
5. Battery cover (bottom cap of handle)

INSTRUCTIONS FOR USE

Before using your product, please read this instruction manual carefully and completely.

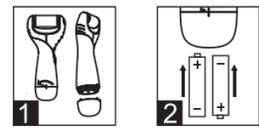

Battery installation

1. Remove the battery cover (bottom cap of handle) (fig.1)
2. Insert 4AA batteries in the battery compartment following the battery direction sign (fig.2) as printed on the bottom of the handle.
3. Close the battery cover until the cover clicks into place and locks (fig.3)



HOW TO USE

Product is designed for smoothing coarse skin on the feet and heels (fig.4). Do not use this device anywhere else on the body.



Note: Only use the roller on dry skin.

1. Wash and clean the skin and dry fully
Note: Do not use on broken or bleeding skin.
2. Insert the roller into the unit. For instruction on removing and replacing the roller, see section 'Changing the Roller'
3. Remove the protective cover from the unit and it is ready to use

WARNING/IMPORTANT

- Before using your product please read all there instructions carefully and completely.
- The product is ONLY for use on the feet and heels. Do not use this device anywhere else on the body.
- Do not use on skin that is red, irritated, inflamed, infected or blistered.
- Do not use on warts.
- Do not store your unit where it can fall into a tub or sink of water.
- Never use your unit if it has been damaged or submerged into water.
- Always turn your unit "OFF" when it is not in use and before cleaning it.
- Overuse may cause skin irritation.
- Seek medical attention if skin becomes severely irritated or bleeds.
- Only use the product on dry skin.
- This unit is for dry use only.
- Do not use on skin for more than 2-3 seconds at a time.
- Do not use the roller when you find there are worn or nicked edges on the roller.
- This appliance is not intended to be used by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

CHANGING THE ROLLER

The roller contains fragile parts-please handle them with care.

Please take extra care when replacing the roller.

Note: Rollers that are broken or worn may cause damage to the skin.

Change the roller as needed for best results. Rollers last for a few sessions depending on frequency of use and size of area being treated.


Replace the roller when you find any defects or when you find them less effective.

Make sure the unit is turned off before replacing the roller.

1. Remove the protective cover by holding machine.

2. To remove the roller, use one hand to grip the device and push down the release button on the side of unit, and the other hand to take the roller out.

3. Place the new roller head onto the device and push down firmly until it's in place. Check that it has been firmly installed with no signs of loose parts.

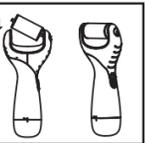

1. Clean unit after each use
 2. Turn the unit off.
 3. Remove the protective cover and the roller from the unit. Rollers can be washed under water for cleaning. Use the provided mini brush.
 4. Rinse the roller under the tap for 5-8 seconds. Wipe the unit with a clean dry cloth.
 5. Replace the roller and protective cover.
- The roller is water resistant, it can be rinsed under water for cleaning but it is not waterproof.
- Do not submerge the unit into water, this may cause damage to the unit.

CLEANING